



# EZ LED SCREEN

The only self-contained LED screen of its size on the market.

## TECHNICAL SPECIFICATIONS

<b>LED Display</b>	Pixel Pitch	2.6 mm SMD
	Screen Dimensions	5' x 8'
	Pixel Resolution	960 wide x 576 high
	Aspect Ratio	1:66:1
	Brightness	1,500 nits
<b>Footprint</b>	Box Dimensions	66" W (71" with foot holes) x 27 1/2" D x 71" H
	Screen Up Dimensions	5'-10 1/2" W x 2'-9 1/2" D (5'-1 1/4" D with outriggers) x 11' H
	Weight	822 lbs. (372.9 kg)
<b>Power</b>	Screen/Lift	(1) 120V 20A Circuit
<b>Audio/Video</b>	Inputs	HDMI, Onboard BrightSign Media Player, SDI available upon request at additional charge
	Options	Playback audio and camera options available upon request at additional charge



**HEADQUARTERS**  
30 Wright Ave.  
Lititz, PA 17543  
T: 717.740.2400

[www.choice.live](http://www.choice.live)








# EZ LED SCREEN

The only self-contained LED screen of its size on the market.

## ASSEMBLY INSTRUCTIONS

1. Roll the EZ LED to desired location (make sure it's close to a power source and on level ground).
2. Using the small T-wrench, unlock all (9) locks labeled "A."
3. Once unlocked, lift lid with your assistant on the other side (facing you) and slowly fold down into place. CAUTION: If not careful, fingers could be pinched!
4. Using the small T-wrench, lock both "B" locks to ensure lid stays in place.
5. Carefully remove the outriggers (legs) from the box and slide into outrigger holders to designated white line.
6. Secure each outrigger using the large L-wrench plus (2) washers and (2) screws per leg.
7. To balance the EZ LED, twist the bottom nut on the outrigger up to apply pressure. Once all of the bottom nuts are in place, twist top nuts down to apply pressure to the top of the outrigger.
8. Using the small T-wrench, unlock both "C" locks and fold down the side wall.
9. Using the small T-wrench, unlock both "D" locks and fold down remaining side and front wall. CAUTION: Secure both side wall and front wall so they don't fall down. Have an assistant help you complete this step.
10. Unravel the "motor power" cord from inside the box and plug into the nearest power source.

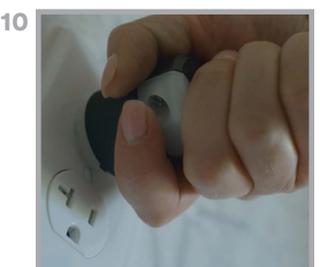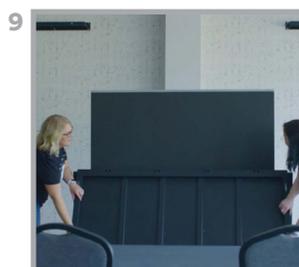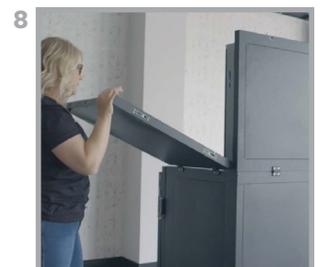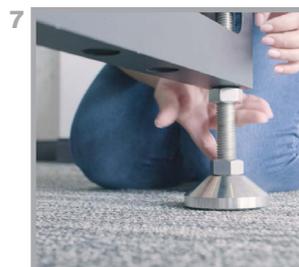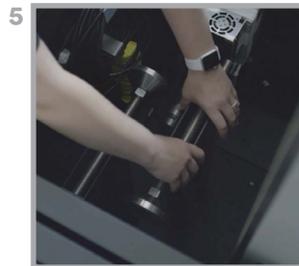

**HEADQUARTERS**  
30 Wright Ave.  
Lititz, PA 17543  
T: 717.740.2400

[www.choice.live](http://www.choice.live)




# EZ LED SCREEN

The only self-contained LED screen of its size on the market.

## ASSEMBLY INSTRUCTIONS

11. Remove the yellow remote control from the box, twist the red button clockwise to turn on, and press the “up” button to launch the screen to just above the box.
12. Pull the screen wings out. Use a step ladder and the large T-Wrench to lock all (6) “E” locks to secure the wings in place.
13. Unravel provided powerCON cable and plug the blue end into the back of the screen (port labeled “Power In”).
14. If using a personal computer or media player, plug an HDMI cable into the HDMI input on the back of the screen.
15. **CAUTION: BEFORE RAISING THE SCREEN, LOOK ABOVE FOR POSSIBLE OBSTRUCTION – ceiling lights, fire sprinklers, bird cages and small children, etc.**
16. Raise screen until the “F” indicator arrow is aligned with the guide arrow on screen mast (see photo). Insert the F-pin into the F-slot on the back of the screen if above the line marked on the mast.
17. If you’ve reached your desired height, skip to step 21.
18. Raise screen until the “G” indicator arrow is aligned with the guide arrow on screen mast. Insert the G-pin in the G-slot on the front of the screen if above the line marked on the mast.
19. If you’ve reached your desired height, skip to step 21.
20. Insert the H-pin in the H-slot of the screen when fully extended. **NOTE: Height max is 11 ft. (You may hear a loud clicking sound as the motor moves the screen into position. This is normal!)**
21. Unplug “motor power” cable once desired height is reached.

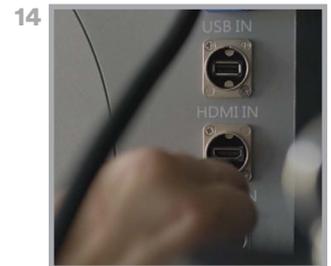

**HEADQUARTERS**  
30 Wright Ave.  
Lititz, PA 17543  
T: 717.740.2400

[www.choice.live](http://www.choice.live)